











Things to know for use

-  Wash before using first time.
-  Please follow the principals of gradual warming and cooling when using this product. Avoid high thermal shocks, as they may cause breakage.
-  When the pan is hot, do not put it on cold or wet surfaces. Empty glassware doesn't belong at a heat source.
-  Do not pour cold liquids into the pan when it is hot.
-  The glass vessels become hot! Please use pott holders.
-  Verwenden Sie die Artikel nur zusammen mit Lebensmitteln und lagern Sie keine Chemikalien o. ä. in ihnen.
-  Heat up the the glass containers evenly and never without content.
-  Do not use detergents with coarse particles that can scratch the surface of the glass (such as sand or steel wool), as this may make the product unstable.
-  Products made of blown glass can be used on electric, and gas stovetops, as long as the bottom of the piece is the same size as the burner/plate. Never allow flame to envelop the sides of the piece.
-  If a piece comes with a plastic lid, please remove before reheating. Some plastic lids (where marked) may be used in the microwave.



Suitable for use in an oven



Suitable for cold storage in the fridge or freezer



Suitable for use in a microwave



Suitable for use in a dishwasher



Suitable for use on an electric plate



Designed for the preparation of food in all kinds of ovens, including microwave and hot air for domestic and commercial use



Suitable for use on a gas range with a flame disperser



10-year guarantee of all functional properties

SIMAX®